


1. TRIM BRAID, DIELECTRIC, AND INNER CONDUCTOR TO DIMENSIONS SHOWN.
2. FILE CHAMFER ONTO CENTER CONDUCTOR AS SHOWN

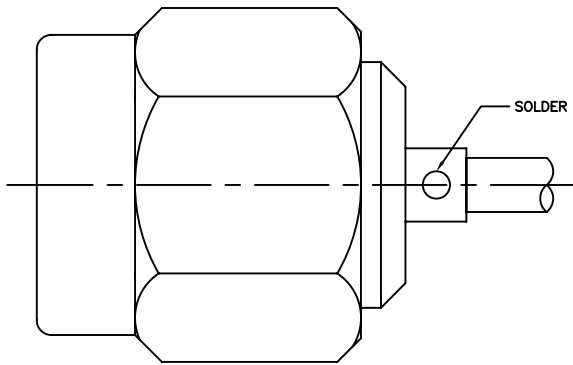

1. INSTALL CABLE INTO BACK OF CONNECTOR AS SHOWN
2. SOLDER BODY AS SHOWN USING 60/40

USED ON  
20-000-1047-00

 SRI CONNECTOR GAGE CO.  
751 NORTH DRIVE  
MELBOURNE FL. 32934

DIMENSIONS ARE IN INCHES TOLERANCES		
DECIMALS	FRACTIONAL	ANGULAR
.X ±.030	± 1/64	.X° ±1°0'
.XX ±.015		.X°X' ±15'
.XXX +.005		

TITLE  
ASSEMBLY INSTRUCTIONS  
SMA JACK TO STORM  
.047 S/R

DRAWN LMW DATE 09/02

SIZE A FSCM NO. 1

SHEET 1 USED ON 20-000-1047-00